ASSEMBLY INSTRUCTIONS

ATTENTION: THIS PRODUCT IS NOT FOR COMMERCIAL USE INTENDED FOR RESIDENTIAL USE ONLY.

RTS493E-WM



Use the correct bolts as indicated. Do not tighten any of the bolts until the swing is completely assembled.

⚠ Do not discard of any of the packaging until you have checked that you have all of the parts and fittings required.

Keep children away during assembly. This item contains small parts that can be swallowed by children. Children should always be under direct adult supervision while using this product.

A Retain these assembly instructions for future reference.

\(\triangle \) Quote the following FQC NO. When contacting the service center.

SERVICE CENTER TOLL FREE NO. TEL: 1-877-539-7436

FAX: 1-877-539-7439



DON'T RETURN TO STORE! PAGE 1 OF 6

COURTYARD CREATIONS INC.

- A. Read instructions thoroughly. Acquaint yourself with the inventory of parts and the accompanying drawings to ensure safe and proper assembly.
- B. You will need the following tools
 - Phillips Screwdriver
 - Nut Wrench (See Part #27)
 - Hex.Key Wrench (See Part #26)
- C. Lay out all parts on a flat surface and identify them using the table below.

PARTS LIST

PART NO.	MATERIAL CODE	PART	Q'TY
1	RTS493E-CS09-8	TOP CROSS BEAM W/ADJUSTABLE TEETH	1
2	62RUS497AN102	REAR UPRIGHT SUPPORT	2
3	62RUS497AN101	FRONT UPRIGHT SUPPORT	2
4	62RUS497AI101	LATERAL CROSS BRACE	2
5	62RTS493EH103	REAR CROSS BRACE	1
6	62RTS493EH102	SEAT AND BACK SUPPORT BRACE	2
7	RTS493E-CS11-1	SEAT ASSEMBLY	3
8	RTS493E-CS01-2	LEFT SWING ARM	1
9	RTS493E-CS01-3	RIGHT SWING ARM	1
10	62RTS498AM101	SWING ARM TUBE	4
11	62RTS493EI101	FRONT/REAR CANOPY BRACE	2
12	62RUS417SH101	U-SHAPED SIDE CANOPY BRACE	2
13	17C01A0835011Y4	BOLT M8*105	4
14	17C01A0721091Y4	BOLT M6'60	6

15	17C01A0716072Y4	BOLT M6*45	16
16	17C17A1306001Y4	SCREW ST4.2*16	4
17	17FA08060601-Y4	WASHER d8.5*D17*1.6	8
18	17FA05050401-Y4	WASHER d6.5*D16*1.2	32
19	18000337005	BOIT CAP M8	4
20	18000337002	BOIT CAP M6	28
21	18000C23001	PLASTIC NUT M6*P1.0	10
22	18000C06001	PLASTIC NUT M8*P1.25	4
23	17GC06043401-Y3	SUSPENSION SPRING	2
24	18000615004	CANOPY/FRAME CONNECTOR	2
25	18000018001	PLASTIC SCREW	2
26	17KAA0201Y4	HEX. KEY WRENCH 6MM	1
27	17KAB1201Y4	NUT WRENCH 13&17MM	1
28	2808020102701	LEG CAP	4
29	61R493ED00001BA	CANOPY	1

Aaaembly(Note: For all nut and bolt fastening, always use a washer (#17 and #18) between the tube and bolt or the tube and nut).

Step 1:

Attach the front and rear upright supports (#2 and #3) at the top by using bolts (#13), washers (#17) and plastic nuts (#22). Repeat the procedure for the other side. Do not tighten plastic nuts and bolts yet. See Fig. A - Step 1.

Step 2:

At both ends, insert the assembled upright supports (#2 and #3) into the top cross beam w/adjustable teeth (#1) See Fig. A - Step 2.

Step 3:

Fasten the lateral cross braces (#4) to the upright supports (#2 and #3) by using bolts (#14), washers (#18) and plastic nuts (#21). See Fig. A - Step 3.

Step 4:


Fasten the rear cross brace (#5) to the rear upright supports (#2) by using bolts (#14), washers (#18) and plastic nuts (#21). Insert the leg caps (#28) into all of base feet. Tighten all of the nuts and bolts now. See Fig. A - Step 4 and Step 5.


Step 5:

Fasten one seat and back support brace (#6) to the seat of two seat assemblies (#7) by using bolts (#15) and washers (#18). See Fig. B.

Note:

Make sure the two arcs of the seat and back support brace (#6) should be facing outside.

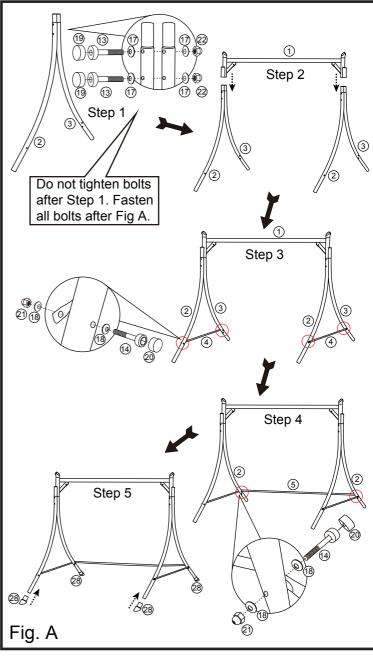

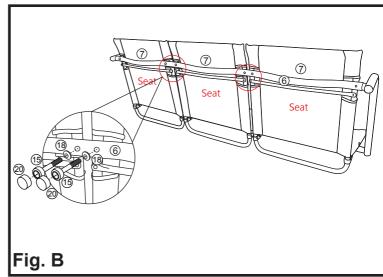



DON'T RETURN TO STORE!

PAGE 3 OF 6

Step 6:

Fasten another seat and back support brace (#6) to the back of two seat assemblies (#7) by using bolts (#15) and washers (#18). See Fig. C.

Note:

Make sure the two arcs of the seat and back support brace (#6) should be facing outside.


Step 7:


Insert the left and right swing arms (#8 and #9) into the seat and back support braces (#6). Fasten them by using bolts (#15) and washers (#18).

See Fig. D and Fig. E.

Note:


The labels marked "L" and "R" on the swing arms (#8 and #9) should coincide with Fig. D to ensure proper assembly.

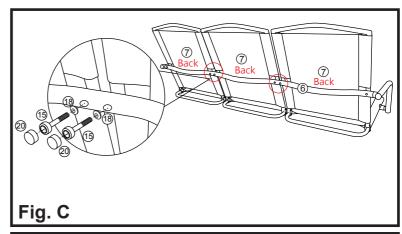

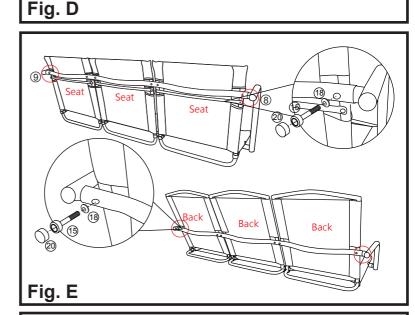

Step 8:

Fasten the swing arm tubes (#10) to the front hole of the seat swing arms (#8 and #9) by using bolts (#15), washers (#18) and plastic nuts (#21). Then fasten the swing arm tubes (#10) to the back of the seat swing arms (#8 and #9) by using bolts (#15), washers (#18) and plastic nuts (#21). See Fig. F.

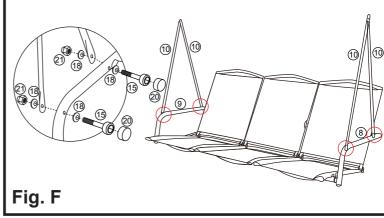




DON'T RETURN TO STORE!

Step 9:

Hook the suspension spring (#23) to the top of the swing arm tubes (#10), and do the same for the other side. See Fig. G.

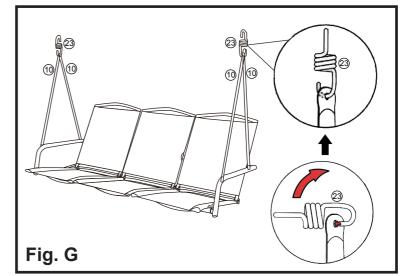

Step 10:

Hang the other side of suspension spring (#23) into the hole located on the angled braces of the top cross beam w/adjustable teeth (#1). Do the same for the other side. See Fig. H.

Warning:

Make sure that both ends of the suspension springs (#23) go completely through the holes in the angled brace on the top cross beam w/adjustable teeth (#1) and wing arm tubes (#10).

Step 11:

Slide the canopy/frame connectors (#24) into the U-shaped side canopy brace (#12) and secure with screws (#16). Make sure that the teeth of cabopy/frame connectors (#24) are facing towards the inside of the swing. See Fig I - Step 1 and Step 2.

Step 12:


Insert the front/rear canopy braces (#11) into the sleeves of the canopy (#29). See Fig I - Step 3.


Step 13:

Insert the front/rear canopy braces (#11) into the U-shaped side canopy brace (#12). See Fig I - Step 4.

Step 14:

Slip the four corners of U-shaped side canopy brace (#12) into the pockets of the canopy (#29). See Fig I - Step 5.

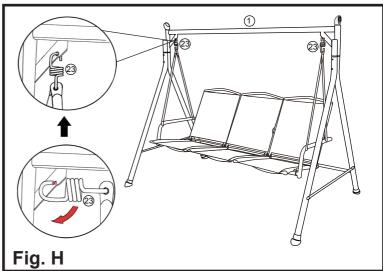

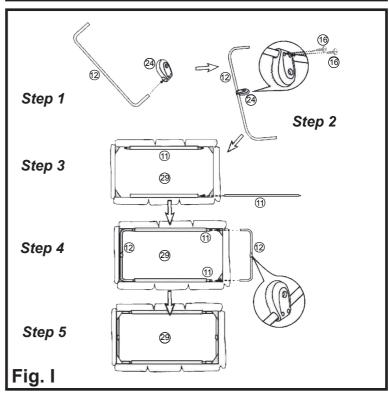




DON'T RETURN TO STORE!

PAGE 5 OF 6

Step 15:

Fasten the canopy assembly (#29) onto the adjustable teeth on top cross beam W/adjustable teeth (#1) with plastic screws (#25) to each side of canopy/frame connectors (#24). See Fig. J and Fig. K.

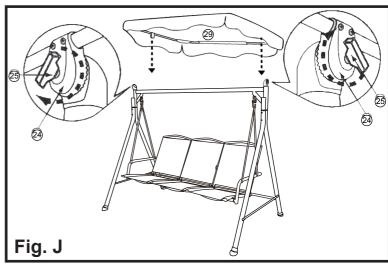

Step 16:

To assure stability, double check that all of the bolts have been completely tightened and cover them with bolt caps (#19 and #20).

Note:

To avoid danger of suffocation, always keep plastic bags or small parts away from babies and children.



Cleaning and Maintenance

- Wash frame and fabric parts with mild soap and water, rinse thoroughly, and dry completely. Do not use bleach, acid, or other solvents on the frame or fabric parts.
- The canopy may be surface washed with mild soap and water if necessary. Commercial foaming upholstery cleaner may also be used. Rinse well and hang to dry. Do not machine wash or dry.
- We recommend the use of furniture covers to protect your swing when not in use.
- Inspect and tighten all bolts and fasteners on a regular basis to ensure the proper performance and safety of your swing.
- In order to prolong the life and beauty of your swing, we recommend that it be stored in a dry and protected area during off season periods.

Special Warnings

- The user of this swing should always inspect it before each use.
- It is essential to place this swing on level ground and not less than six feet from any obstruction, such as fences, garages, houses, overhanging branches, laundry lines, or electrical wires.
- Check the tightness of all nuts and bolts on a regular basis.
- Always remove the canopy in heavy wind conditions, otherwise the canopy may tip over and cause damage to its parts.
- Oil all of the metal parts that move regularly.
- The manufacturer will not accept responsibility for unauthorized repairs or modifications to the swing or its parts.
- Weight limit is 750lbs.



- READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY.

 *SEPARATE AND IDENTIFY ALL PARTS, MAKING SURE THAT YOU HAVE ALL OF THE PARTS LISTED, INSPECT THE PACKING MATERIAL FOR SMALL PARTS ISTED, INSPECT THE PACKING MATERIAL FOR SMALL PARTS THAT MAY HAVE BECOME SEPARATED DURING SHIPMENT.

 *IF YOU EXPERIENCE ANY DIFFICULTY DURING ASSEMBLY OR IF ANY PARTS ARE MISSING OR DAMAGED, CALL THE HELP LINE AT 1-87-339-7438 BEFORE RETURNING THIS ITEM TO THE STORE.
- ★ PROVIDE THE FOLLOWING INFORMATION WHEN CALLING:

 1-MODEL NUMBER OF THE PRODUCT.

 2-PART NUMBER AND MATERIAL CODE OF THE PART FROM THE PARTS
- LIST. ★MOST PROBLEMS CAN BE RESOLVED WITHOUT RETURNING THIS PRODUCT TO THE RETAILER

