

ASSEMBLY INSTRUCTIONS

ATTENTION: THIS PRODUCT IS NOT FOR COMMERCIAL USE

MODEL# RUS4098-2006-WM



⚠ Keep children away during assembly. This item contains small parts which can be swallowed by children.

⚠ Retain the assembly instructions for future reference.

⚠ Please quote following FQC NO. when contacting service center.

FQC
NO:114 B

SERVICE CENTER TOLL FREE NO

TEL: 1-877-539-7436

FAX: 1-877-539-7439

Time: 9:00am and 4:30pm.




DON'T RETURN TO STORE!

COURTYARD CREATIONS INC.

A. Read instructions thoroughly. Acquaint yourself with the inventory of parts and the accompanying drawings to ensure safety and proper assembly.









B. You will need the following tool



-Phillips Screwdriver



C. Lay out all parts and identify using the table below.

PARTS LIST

PART NO.	MATERIAL CODE	PART	Q'TY
1	RUS4098-CS01	 TOP CROSS BEAM W/ADJUSTABLE TEETH	1
2	RUS4098-CS02	 FRONT RIGHT UPRIGHT SUPPORT	1
3	RUS4098-CS03	 FRONT LEFT UPRIGHT SUPPORT	1
4	RUS4098-CS04	 REAR RIGHT UPRIGHT SUPPORT	1
5	RUS4098-CS05	 REAR LEFT UPRIGHT SUPPORT	1
6	62RUS4098C101	 LEFT SEAT AND BACK TUBE	1
7	62RUS4098C201	 RIGHT SEAT AND BACK TUBE	1
8	62RUS4098C102	 SEAT SUPPORT BRACE	1
9	62RUS4098C103	 BACK SUPPORT BRACE	1
10	62RUS4098M101	 FRONT SWING ARM TUBE	2
11	62RUS4098M102	 REAR SWING ARM TUBE	2

PART NO.	MATERIAL CODE	PART	Q'TY
12	RUS4098-CS06	 REAR CROSS BRACE	1
13	RUS4098-CS07	 LATERAL CROSS BRACE	2
14	RUS4098-CS08	 REAR SUPPORT BRACE	1
15	62RUS4098I102	 FRONT/REAR CANOPY BRACE	2
16	62RUS4040H102	 SIDE CANOPY BRACE	2
17	1802623003	 CANOPY/FRAME CONNECTOR	2
18	17C17A0403001Y4	 SCREW ST4 2*12	4
19	1800018001	 PLASTIC SCREW	2
20	17GC06042401	 SUSPENSION SPRING	2
21	61R4098C00001BA	 SEAT AND BACK CUSHION	1
22	61R4098D00001BA	 CANOPY	1




DON'T RETURN TO STORE!

Step 1: Align the upright supports. Insert the rear right upright support(#4) into the front right upright support(#2). Do the same procedure for the other side (#3, #5). See Fig. A-step 1.

NOTE: Make sure the number labels marked "2, 3, 4, 5" on the upright supports should be coincided with the numbers in Fig. A to ensure proper assembly.


Step 2: Attach the top cross beam(#1) to both ends of the upright supports. Make sure the spring buttons on the rear upright supports(#4, #5) come through the holes on the top cross beam(#1). See Fig. A-step 2.

Step 3: Fasten the lateral cross braces(#13) to the upright supports(#2, #3, #4 and #5) for both sides. Lock the rear cross brace(#12) to the rear upright supports(#4, #5). See Fig. A-step 3.

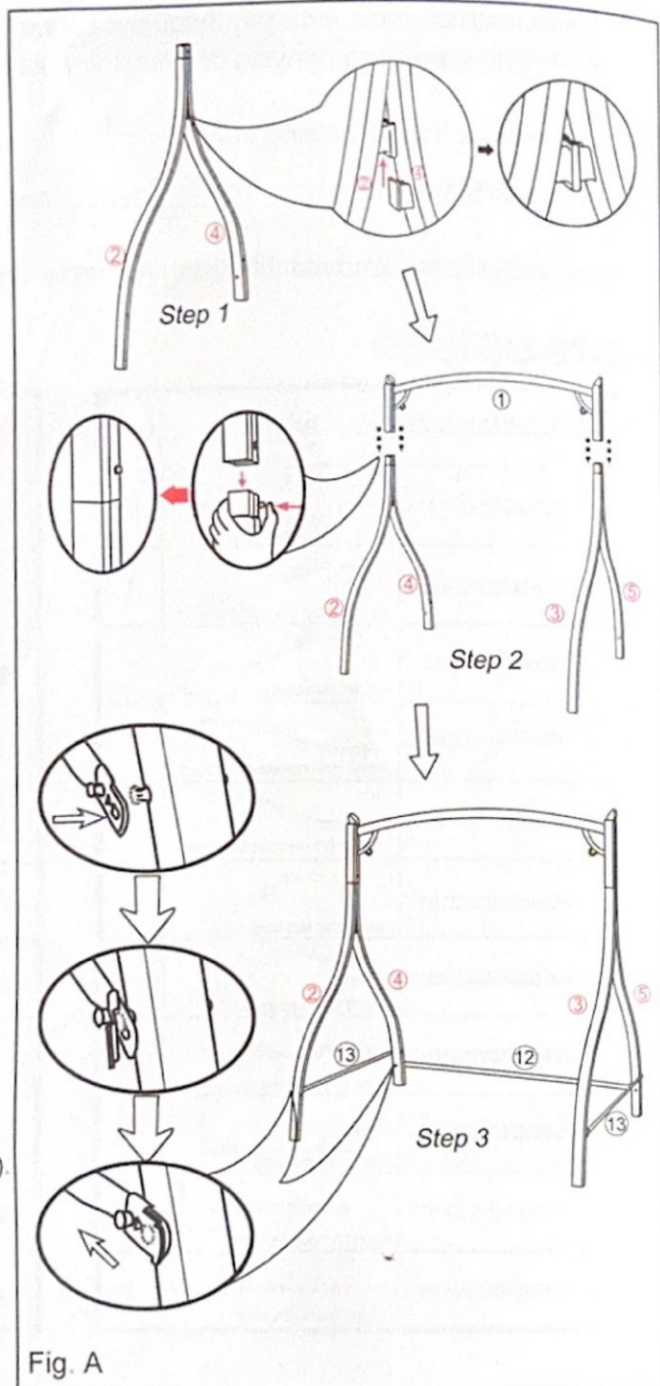


DON'T RETURN TO STORE!

Step 4: Position the seat and back cushion(#21) on a non-abrasive surface, such as a carpet, then unfold the cushion, with the underside facing up. See Fig. B.

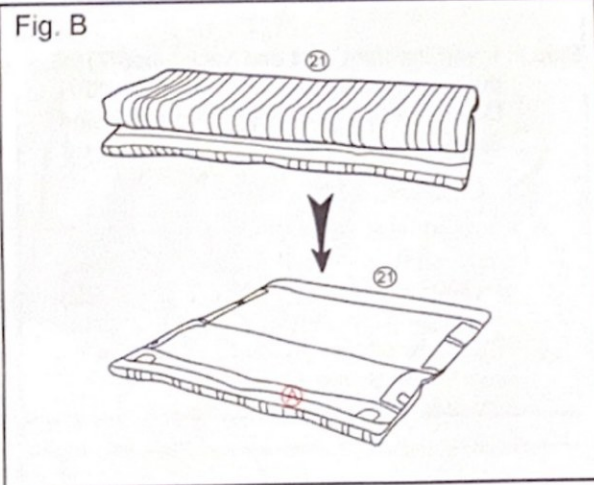


Step 5: Insert the seat support brace(#8) into the seat sleeve of the seat and back cushion (#21). See Fig. C.

NOTE: Make sure the seat support brace insert into seat sleeve marked "A". See Fig. C-step 1. The two arcs of the seat support brace should be facing up. See Fig. C-step 2.

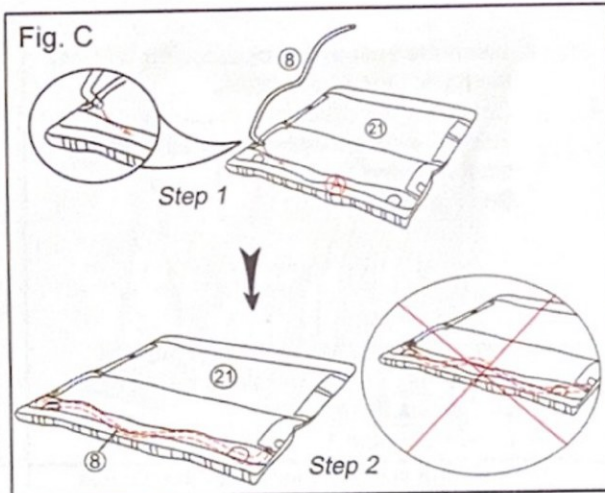

Step 6: Insert the back support brace(#9) into the back sleeve of the cushion(#21). See Fig. D.

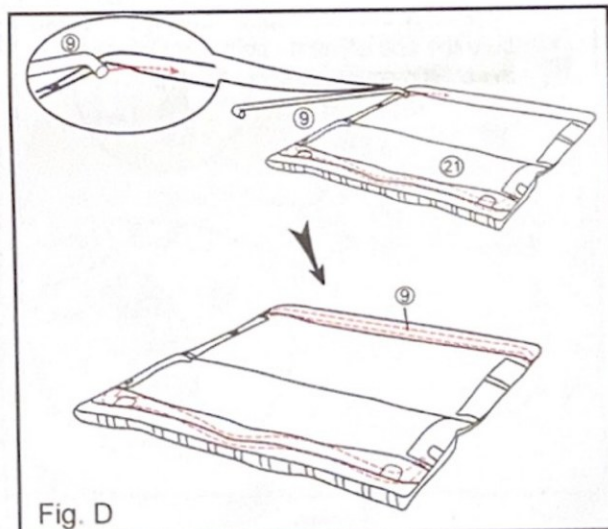


DON'T RETURN TO STORE!


Step 7: Insert the right seat and back tube(#7) into the right side sleeves of the cushion(#21). Do the same procedure for the other side. See Fig. E.

NOTE:

1. Make sure the number labels marked "6, 7" on the seat and back tubes(#6, #7) should be coincided with the numbers in Fig. E to ensure proper assembly.
2. Make sure that the welded parts on the seat and back tubes should be facing outwards. See Fig. F-illustration A.

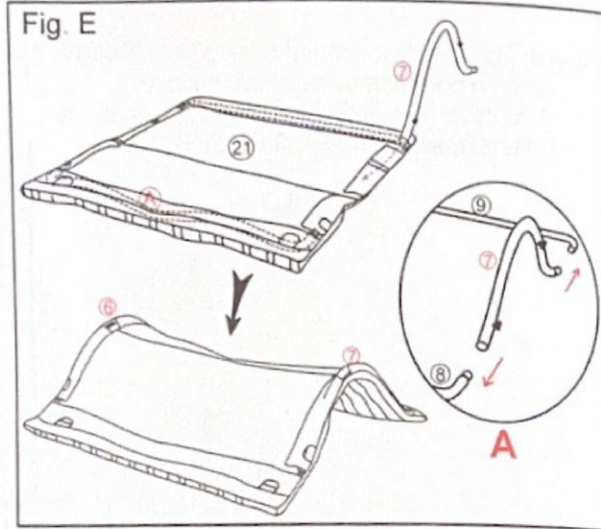


Step 8: Insert the seat and back tubes(#6, #7) into the back support brace(#9). See Fig. F-illustration B. Insert the seat support brace(#8) into the seat and back tubes(#6, #7). See Fig. F-illustration C.

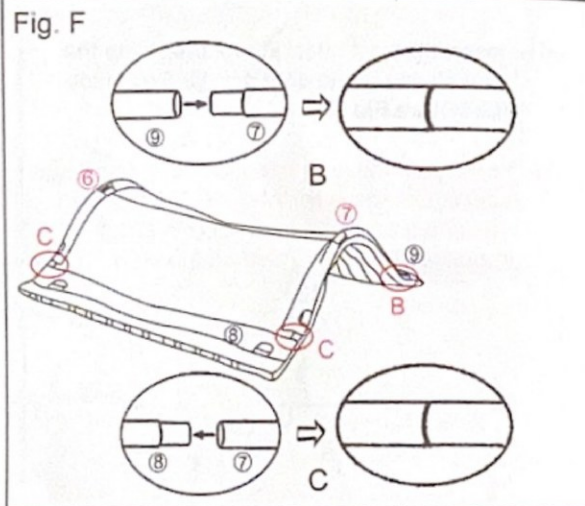

Step 9: Insert the two ends of the rear support brace(#14) into the slots of the seat and back tubes(#6, #7). See Fig. G-step 1.

Press the spring button, slide the thimble attached on the rear support brace(#14) to the joint of the rear support brace, and make sure the end of the thimble come close with the plastic cover. See Fig. G-step 2.

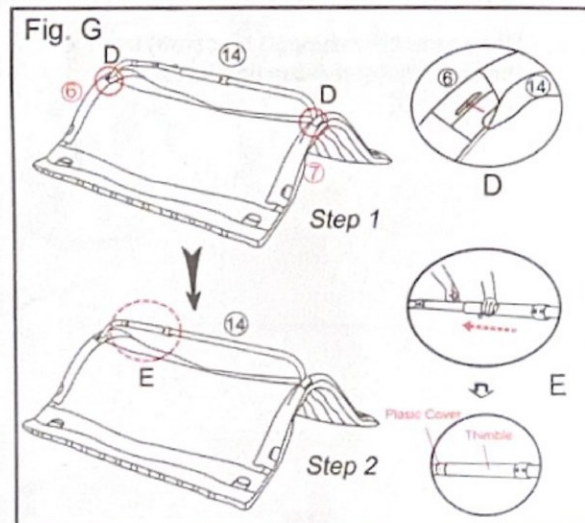


DON'T RETURN TO STORE!

Step 10: Attach the swing arm tubes(#10, #11) to the welded parts of the seat and back tubes(#6,#7). See Fig. H.


NOTE: Make sure the longer swing arm tubes(#10) attached on the seat parts of the tubes (#6, #7).

Fig. H

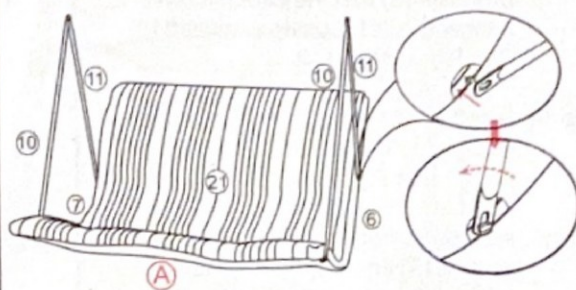

Step 11: Hook the suspension spring(#20) into the holes at the top of both swing arm tubes (#10, #11). Do the same procedure for the other side. See Fig. I.

Fig. I

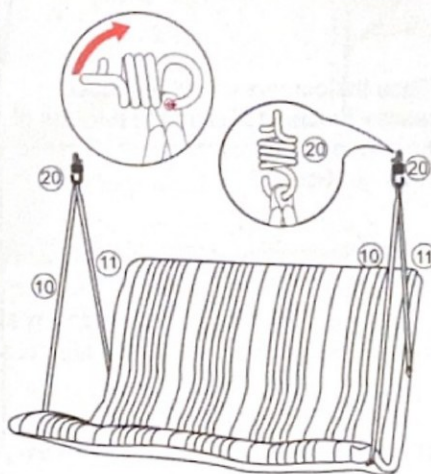

Step 12: Hang the suspension spring(#20) into the hole on the angled brace located on the top cross beam(#1). Do the same procedure for the other side. See Fig J.

Warning:

Make sure that both ends of the suspension springs go completely through the angled braces on part(#1) and the swing arm tubes(#10, #11).

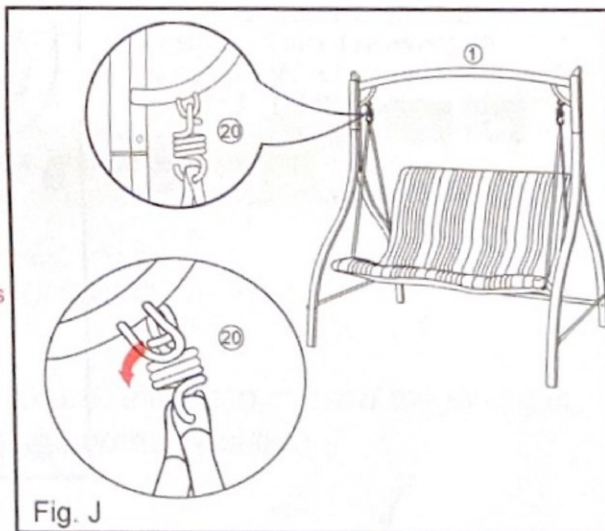


Fig. J



DON'T RETURN TO STORE!


Step 13: Insert the U-shaped side canopy braces(#16) into the canopy/frame connectors(#17) using screws(#18). See Fig. K-step 1, 2.

Step 14: Insert the front and rear canopy braces (#15) into the sleeves of the canopy (#22). See Fig. K-step 3.

Step 15: Attach the front and rear canopy tube ends(#15) into the U-shaped side canopy braces(#16). See Fig. K-step 4.


NOTE: Make sure that the teeth of the canopy/ frame connectors(#17) are facing inwards.

Step 16: Place the corners of the U-shaped canopy braces(#16) into the pockets of the canopy(#22). See Fig. K-step 5.

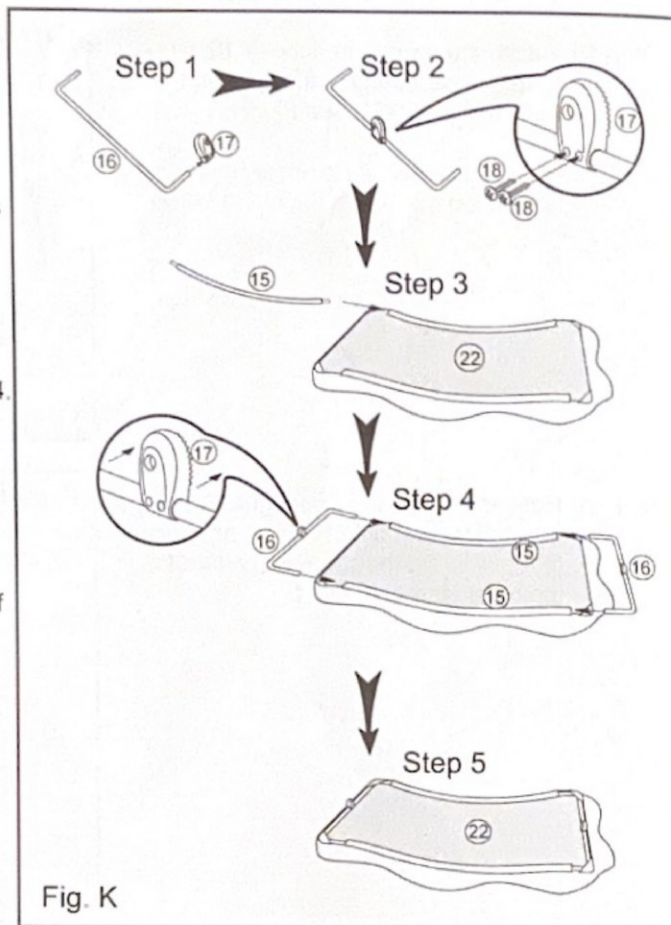

Step 17: Attach the canopy assembly onto the adjustable teeth located on both sides of the top cross beam(#1) using the plastic screws(#19) into the canopy/ frame connectors(#17). See Fig. L.

Step 18: See full assembly.

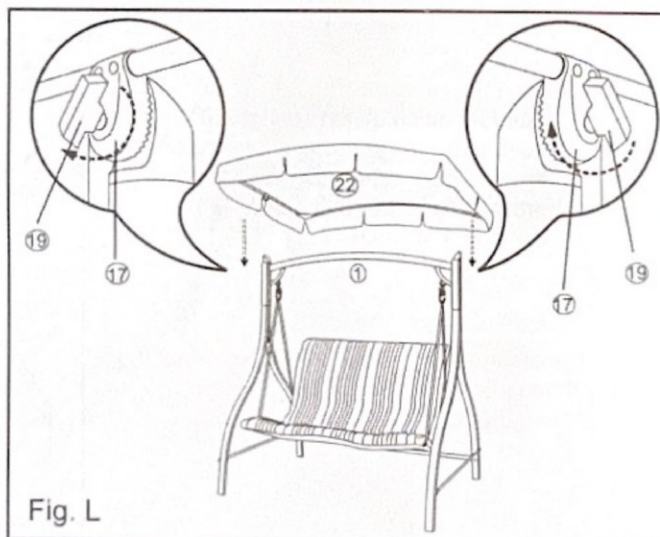

DON'T RETURN TO STORE!

CONGRATULATIONS!!

To avoid danger of suffocation, please always keep plastic bags or small parts away from babies and children.



Cleaning and Maintenance

- Wash frame parts with mild soap and water, rinse thoroughly. Dry frame completely. Do not use bleach, acid or other solvents on the fabric or frame parts.
- We recommend the use of furniture covers to protect your swing when not in use.
- Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your swing.
- Oil all metallic moving parts during usage season.
- In order to prolong the life and beauty of your swing, we recommend that the swing be stored in a dry and protected area during off season periods.

Special Warnings

- The user of this swing should always inspect it before each use.
- It is essential to place the swing on level ground and not less than six feet from any obstruction, such as fences, garages, house, overhanging branches, laundry lines or electrical wires.
- Check the tightness of nuts and bolts on a regular basis.
- Ensure that the suspension springs are properly hooked before each use.
- Remove the canopy in heavy wind conditions; otherwise, the canopy may tip over and cause damage to its parts.
- Oil all metallic moving parts during usage season.
- The manufacturer will not accept responsibility for unauthorized repairs or modifications made to the swing.
- Weight limit is 500 lbs.

Retain the assembly instructions for future reference, in case the swing is disassembled for storage or to move to another location.



DON'T RETURN TO STORE!